



QUALITY... PLAIN & SIMPLE®

## Lokar Dial-In Board and Mounting Bracket Installation Instructions

### General Installation Notes:

Please read these instructions completely before beginning the installation. If you have any questions, please call.

Before beginning the installation, disconnect the negative battery cable and use wheel chocks to block the vehicle's wheels.

We recommend using anti-seize lubricant on all aluminum threads.

Refer to Fig. 1 (Cage Mount) or Fig. 3 (Universal Mount) for the component names.

**NOTE:** The Lokar Dial-In Board is reversible so it can be viewed from either side of the tower. To reverse the Dial-In Board, remove the two hair pin clips and slide the board out of the uprights. Reinstall the Dial-In Board board facing the correct direction, and reinstall the two hair pin clips.

### 1-1/2" OR 1-5/8" CAGE INSTALLATION

**Step 1:** Using a 3/16" Allen wrench, loosen the two 1/4"-20 x 5/8" socket head bolts in the angle mount ears. Slip the mount ears over the cage bar. Snug down both bolts.

**Step 2:** Set the mount ears and Dial-In Board to the desired angle and tighten the bolts. See Fig. 2 for a finished installation.

### UNIVERSAL MOUNT INSTALLATION

(on any flat surface)

**Step 1:** Determine the location where you want the Dial-In Board to be mounted. Use a 9/32" drill bit to drill two holes 1-1/2" apart center to center. Bolt the universal mount bracket to the flat surface with two 1/4"-20 bolts (not included).

**Step 2:** Using a 5/32" Allen wrench, loosen the two 1/4"-20 x 5/8" flat head bolts on the side of the universal mount bracket. Set the Dial-In Board arm to the desired angle and tighten the flat head bolts. See Fig. 4 for a finished installation.

# Lokar Dial-In Board and Mounting Bracket Installation Instructions

Building American Quality... With A Lifetime Warranty!®

TOLL FREE 1-877-469-7440 • tech@lokar.com • www.lokar.com

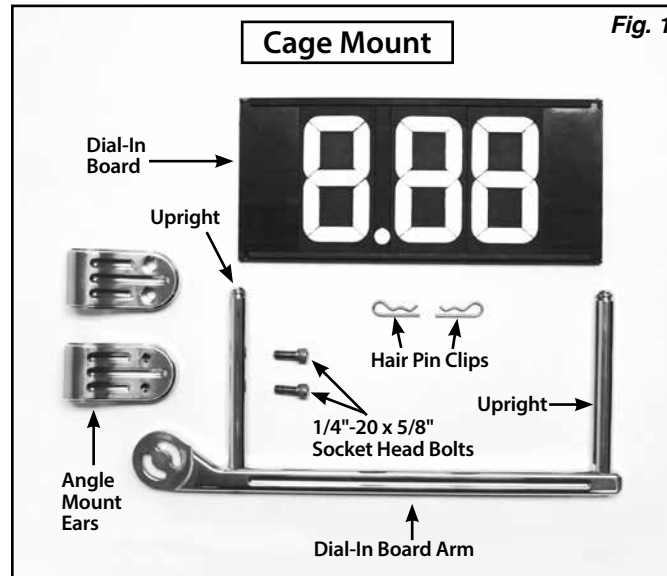


Fig. 1

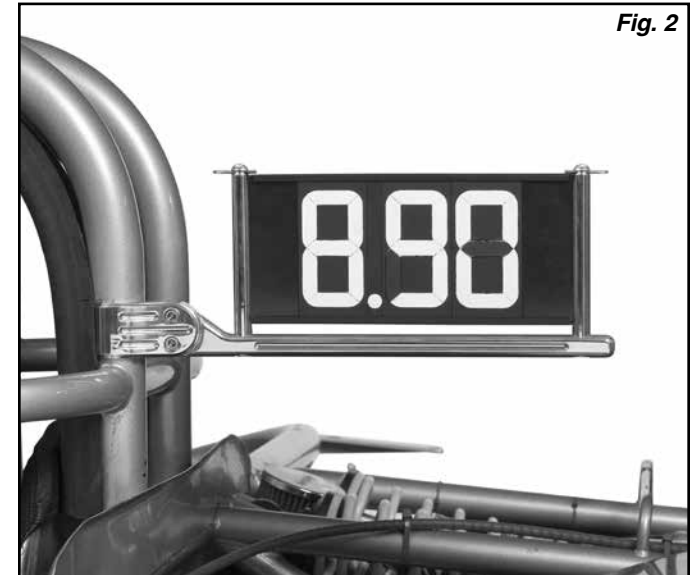


Fig. 2

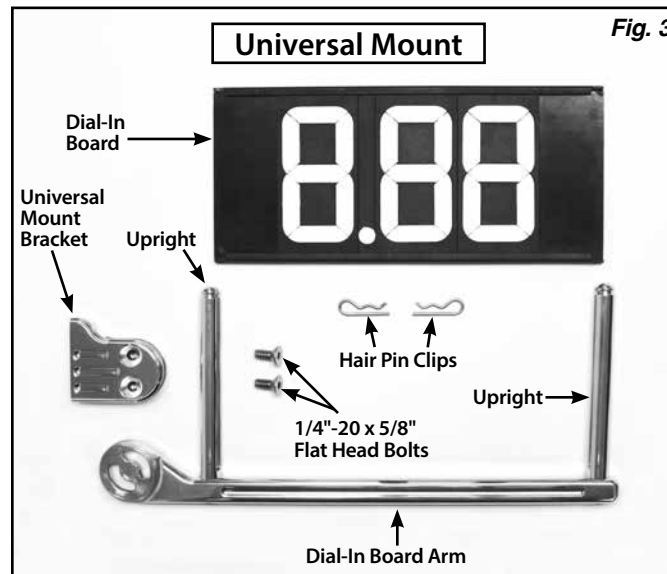


Fig. 3

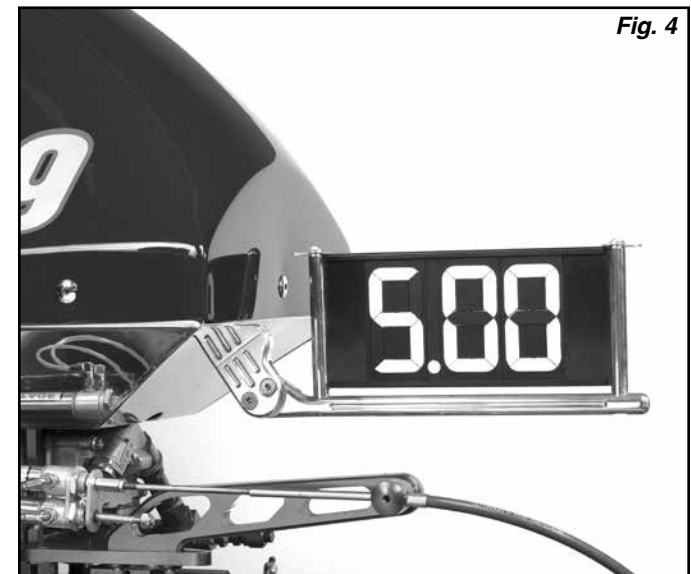


Fig. 4